

FAQ

NR: 028

SOFTWARE: 3D-VIZ CONTROL

HANDLING

What are F-Settings?

With the F-Settings you can define the number of images and their degrees variable, save it to an F-key and fully retrieve it in another job with a keystroke.

The level numbers must be separated by „;“. Unlike as „frames“ the positions you are choosing are not calculated by the program.

Values such as 0.1 are also possible steps.