

# FAQ

NR: 029

SOFTWARE: 3D-VIZ CONTROL

HANDLING

## For what I need the „Forward“ and „Backward“ buttons?

You want to define the initial position at  $0.10^\circ$  exactly? Then you can let rotate the turntable slowly or quickly by clicking FORWARD or BACKWARD.

Click again on the button the rotation is stopped again. This function can be adjusted as a function of „Speed“.

Turn the speed control to „max“ it turns fast.

Turn the speedcontrol to „min“ it turns slow.