

FAQ

NR: 032

SOFTWARE: 3D-VIZ CONTROL

HANDLING

The camera does not release after some pictures, the turntable however-continues to rotate.

Mostly this is due to a fault of individual flash generators that are not installed properly or are not shielded.

Switch off the generators and try it again. If it works, use please an suppressed USB cable.