

# FAQ

NR: 034

HARDWARE: DREHTELLER

HANDHABUNG

## The column seems to wobble. What can I do?

The turntable must be aligned with a spirit level. To do this use the leveling wheels or leveling screws on the bottom of the turntable.